

200W Profile

User Manual



Guangzhou Mitek Light Co.,LTD

Email: info@miteklight.com

Website: www.miteklight.com

Add: No. 21 Dongfeng Avenue, Automobile Industry Base, Huadu District, Guangzhou

TECHNICAL PARAMETERS

Light source

Input power: AC90~240V wide voltage range input

Light source: 200W COB LED WW+CW

Controls

Channel: 6/2 DMX512 control channels can be set

Control mode: voice control\master-slave\auto color change\DMX512

Overview

First of all, thank you for your trust and purchase of our LED series products. For your better safety and better use of this new lamp, please read this instruction manual carefully before use and operate according to the regulations to avoid misuse and cause unsafe factors and damage to the lamp.

Precautions

1. Please have professionals install and debug the lamps. Non-professionals are strictly prohibited from dismantling the lamps privately.
2. Please turn off the power when not using the lamps or cleaning the lamps.
3. Do not use in a humid environment (except waterproof lamps) and keep away from flammable materials at least 0.5 meters away.
4. Do not look directly at the light of the lamp with your naked eyes, which may cause damage to your eyes.
5. Do not change the internal circuit structure of the lamp without permission, which may cause the lamp to short-circuit or burn out.

Key operation instructions



MENU: Function key **UP:** Plus key **DOWN:** Minus key **ENTER:** Confirm key

Button Description

MENU function key:

Pressing the function key MENU will cycle through the functions in Table (I). The first 1-2 digits of the digital tube represent the current function. The last 2-3 digits represent the speed, effect and other parameters of the function; press the UP or DOWN key to modify the parameter value; press the ENTER key to confirm.

UP plus key: Press this key to add, and press for more than 2 seconds to add continuously;

DOWN minus key: Press this key to subtract, and press for more than 2 seconds to subtract continuously;

ENTER confirmation key: Press this key to save the currently set parameter function, and automatically run the saved function the next time you start the machine.

Digital tube display menu description

NO.	content	number range	Function and description
1	d001	001- 512	DMX512 address code setting-3 channel mode
2	A001	001- 512	DMX512 address code setting-7 channel mode
3	C255	000 - 255	Warm white dimming, from dark to light.
4	U255	000 - 255	Cold white dimming, from dark to light.
5	FH99	01 - 99	Strobe, speed from slow to fast.
6	FF99	01 - 99	Jump, from slow to fast.
7	EE99	01 - 99	Gradual change, from slow to fast.
8	CP99	01 - 99	The pulse changes from slow to fast.
9	S0UD	-	Voice-activated jump

DMX channel description

6-channel mode

channel	function	illustration
CH1	Total dimming	U/V Total dimming, from dark to light
CH2	C dimming	Warm white dimming, from dark to light
CH3	U dimming	Cold white dimming, from dark to light
CH4	Total strobe	Total strobe, from slow to fast
CH5	Function Selection	0—50: DMX Dimming; 50—100: Jump; 101—150: Gradient ; 151—200Pulse changes;201-255:Voice control
CH6	Function speed	Function speed, from slow to fast

2-channel mode

channel	function	illustration
CH1	C dimming	Warm white dimming, from dark to light
CH2	U dimming	Cold white dimming, from dark to light

REMARK

The product has perfect performance and integrity packing.

All users should be strictly comply with the warning and operating instructions as stated.

Or we aren't in charge of any result by misusing.

Any damage resulting by misuse is not within the Company's warranty.

Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted.

All information is subject to change without prior notice.