

300W Profile Zoom

User Manual



Guangzhou Mitek Light Co.,LTD

Email: info@miteklight.com

Website: www.miteklight.com

Add: No. 21 Dongfeng Avenue, Automobile Industry Base, Huadu District, Guangzhou

Graphic section:



- A. Function key
- B. Add key
- C. Minus key
- D. Confirm key



A B C D

Operation Instructions: Press function key A to cycle through different functions, press key B or C to modify the parameter value, and press key D to confirm.

Four-digit digital keypad operation instructions

NO.	menu	Menu functions	illustrate
1	d001	DMX512A address code setup 001	Press the up and down keys to adjust the address code and press the OK key to save.
2	L255	L dimming 0-255	Press the up and down keys to adjust the L brightness, and press the OK key to save.
3	H255	H dimming 0-255	Press the up and down keys to adjust the H brightness, and press the OK key to save.
4	F255	Focus 1 adjustment 0-255	Press the up and down keys to adjust the focal length 1, and press the confirm key to save.
5	Y255	Focus 2 adjustment 0-255	Press the up and down keys to adjust the focal length 2, and press the confirm key to save.
6	EP-0/1	Signal hold selection EP-1 is held, EP-0 is not held.	Press the up and down keys to select whether to keep the signal, and press the OK key to save.
7	DP-0/1	DP-1 Black screen, DP-0 Always on	Set whether to black screen.
8	DISP	Show inverted selection	Press the up and down keys to select normal display and reverse display.
9	NT00	Display current operating temperature	The working temperature of the lamp beads.

channel mode

NO.	function	illustrate
CH1	Total dimming	(0-255) Overall dimming, linear dimming, from dark to bright
CH2	L dimming	(0-255) L Dimming, linear dimming, from dark to light
CH3	H dimming	(0-255) H Dimming, linear dimming, from dark to light
CH4	Focal length 1	(0-255) Focus 1 adjustment.
CH5	Focal length 2	(0—255) Focus 2 adjustment.
CH6	Reset	(0-244) No function, (245-255) Wait for 5 seconds to reset.

In the address code state, after multiple machines are connected, if there is no console connected, the master-slave connection function can be realized, and one of the devices can be operated, and the other devices in the address d001 state will follow the host to run the program synchronously. After the console is connected, if the console signal is received, the d of the address code will become A, and the device in the address state can be controlled by the console.

REMARK

The product has perfect performance and integrity packing.

All users should be strictly comply with the warning and operating instructions as stated.

Or we aren't in charge of any result by misusing.

Any damage resulting by misuse is not within the Company's warranty.

Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted.

All information is subject to change without prior notice.