

Golden blinder 1050 IP

User Manual



Guangzhou Mitek Light Co.,LTD

Email: info@miteklight.com

Website: www.miteklight.com

Add: No. 21 Dongfeng Avenue, Automobile Industry Base, Huadu District, Guangzhou

TECHNICAL PARAMETERS

Light source

Voltage:AC 110-260V, 50/60Hz

Power:400W

Lamp:10pcs*2in1 50Watt LED

CRI>95

Controls

multi-channel mode ,DMX512 Console

Colorful color

automatic / online synchronization

Strobe mode

Weight&Dimension

Packing Size: 110*15*21cm

Net Weight: 9.5Kg;

Gross weight: 10kg

Safety precautions

- To ensure that the local voltage and the required voltage for product is consistent.
- If a product's power cord is damaged, please do not try to use the product. Do not try to unplug the power cord from the ground plug. Plug is used to reduce short-circuit electric shocks and fire prevention.
- Before making any connections disconnect the main power supply.
- In any case, please do not remove the lid, which is not part of the user can use.
If the product of the shell is missing, please do not run product.
- Do not stuff the products to the dimmer package. Guarantee that the product in the ventilate place ,and maintained between the product and the wall 6 feet (15 cm) distance.
- If damaged, please do not run product.
- If the long-term non-use products, please disconnect the power.
- Make sure the product located in a safe and stable place.
- Special attention to the power cord from being pinched or out of product.
- Cleaning :
In accordance with the manufacturer's recommendation to clean products' fixed position. Please read the "cleaning" in detail.

Heat output

Devices should be away from heat sources such as radiator, heater, warm furnace or other devices generate heat.

In the following circumstances, the fixed installations are required to qualified service personnel overhaul:

A. When the power cord or plug is damaged.

B. The product fall or when the liquid outflow the device.

C. When the device does not work correctly, or have some change in the exhibition.

Installation of power

At the time of switching in power, make sure that the voltage in your area is consistent with the the led spot light's voltage. This for AC110-240V. Since different parts of the voltage is different, so products in operation, make sure your wall outlet voltage consistent with the product.

DMX combination

In order to ensure a fixed DMX data transmission, when using several DMX device to the fullest extent possible use the shortest cables. Fixtures connected to the DMX channel order does not affect the choice of DMX. For example:when the allocation of fixed installations DMX 1 channel, DMX will be located in any location, in the front, back or middle of anywhere. When the fixed installations assigned to DMX 1 channel, whether it is located in which of the DMX channels, DMX controller is aware that the data sent on the channel one.

LED Screen



K1: Menu K2: Up K3:DOWN K4:Enter
Screen code: K1 to K2 to K3 to K4

MENU

Main menu	Second menu	function
DMX Setting	DMX Address 001	001-512
	Channel Mode CH07	CH07/CH27/CH20
Static	Dimmer 255	000-255
	Warm white 000	000-255
	Pure white 000	000-255
Auto Run	Effect 00 <input checked="" type="checkbox"/>	Effect: 00-46 Effect 00: No effect Effect 01:color gradual change Effect 02:Color pulse change Effect 03: color jump change Effect 04: effect 1 Effect 05-46: effects "√"is the current effect
	Mic 00	Mic: 0-5 Mic 0: no sound mode Mic 1-4: sound modes Mic 5: sound modes flow

		"√"is the current sound mode
	Speed 100	000-100: effect speed
	Dimmer 255	000-255
	Fixed color 0	Fixed color: 0-3 Fixed color 0: color change flow Fixed color 1: white1 Fixed color 2: white2 Fixed color 3: white1+white2
Setting	Sig State Clear	Clear/Keep: Clear: data clear Keep: data keep
	Dim Curve Line	Line/Square/l-squ/S-line Line: linear power curve Square: square power curve l-squ: Anti square power curve S-line: S type power curve
	Dim Freq 14K	1K-25K
	Dim Speed 000	000-255
	Dim Mode 16Bit	8Bit/16Bit 8Bit: 8bit dimming 16Bit: 16bit dimming
	Fan Mode Control	Control/Continue Control: fan under temperature control Continue: fan without control
	M/S Mode Slave	Master/Slave
	Display Invert NO	YES/NO
	Backlight 1Min	10S/30S/1Min/Always
	Lock 1Min	10S/30S/1Min/OFF
	Language Chinese	Chinese/English
	Output Pos R/GBW	R/GBW / RG/BW
Factory NO	YES/N0	
Information	Ver RSL240910C1 DIS F6Y4D18Z06 LED Temp 00°C Max Temp 00°C Use Hour 0	

DMX MODE

27Channel

No	Function	VALUE
CH1	Dimmer	0-255
CH2	Strobe	0-5 No effect 6-255 :strobe slow-fast
CH3	Effect	0-5: no effect Selectable Effect : 6-210 Fix effect: 211-255***/ 4, 5-7CH on 255, 2CH : effect selection 6-10 effects (Selectable effect) 11-15 effect1 16-20 effect2 Effect 3-effect40/ each value 5 4CH on 255,2CH effect selection

		211-215 Color gradual change 216-220 Color pulse change 221-225 Color jump change 226-230 Color effect 1 231-235 Color effect 2 236-239 Sound 1 240-243 Sound 2 244-247 Sound 3 248-251 Sound 4 252-255 Sound modes
CH4	Speed	Slow-fast
CH5	White1	0-255
CH6	White2	0-255
CH7	Color selection	0 :No effect 1-84 White1 86-170 White2 171:No effect 172-255:White1+white2
CH8	White1(1)	0-255: (1) white1 dimmer
CH9	White2(1)	0-255:(1) white2 dimmer
.....
CH26	White1(10)	0-255:(10) white1 dimmer
CH27	White2(10)	0-255:(10) white2 dimmer

20 Channel

NO	function	value
CH1	White1(1) dimmer	0-255: (1) white1 dark-bright
CH2	White2(1) dimmer	0-255: (1) white2 dark-bright
.....
CH19	White1(10) dimmer	0-255:(10) white1 dark-bright
CH20	White2(10) dimmer	0-255:(10) white2 dark-bright

Cleaning

As the smoke and dust corrosion, internal and external vision lens must be cleaned out to make the light output power optimization.

1. Use the glass cleaner and soft cloth to clen the package.
 2. Every 20 days, use the glass cleaner and soft cloth to clean the external lens.
 3. When you insert the power is always to ensure that every part of the product dry.
- When Fixtures run, require regular cleaning according to the different environments.

Troubleshooting

The following are some common problems encountered and the solutions when the customers use it:

- For there is no response to DMX
- Check the DMX cable is properly connected (pin3 as follows: "hot", in other DMX devices, pin2 are also as follows: "hot" means.
- For the voice made no reply

Sound is too small or too high-profile voice can not make it up and running. If this problem persists, please contact your vendor for help.

REMARK

The product has perfect performance and integrity packing.

All users should be strictly comply with the warning and operating instructions as stated.

Or we aren 't in charge of any result by misusing.

Any damage resulting by misuse is not within the Company 's warranty.

Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted.

All information is subject to change without prior notice.